




**Installation Instructions**  
**8660 (11226.01) Black and 11103.02 Stainless Steel**  
**866009 (11301.01) Titanium**  
**Euro Tail Light Guard 76-06 CJ/Wrangler**

**Step 1:** Remove the four Phillips head screws from the tail light lens.

**Step 2:** Remove the tail light lens cover.  
**Note:** Use caution as the lens may stick to the light housing.

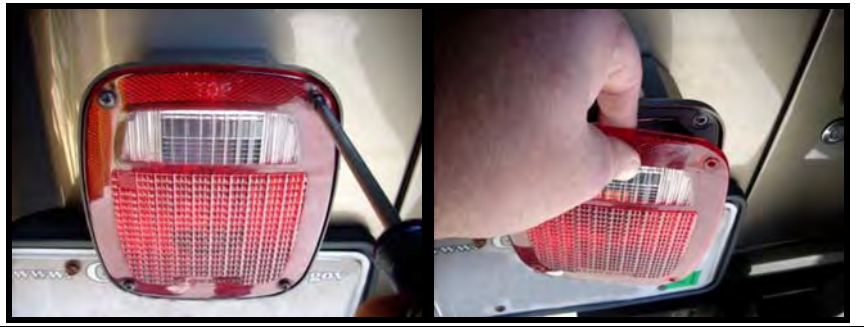

**Step 3:** Remove the 3 tail light assembly retaining bolts.

**Step 4:** Remove the tail light housing from the body.



**Step 5:** Carefully pull the tail light wiring through the hole. Guide the connector through the hole.

**Step 6:** Disconnect the tail light harness from the main harness.





**Installation Instructions**  
**8660 (11226.01) Black and 11103.02 Stainless Steel**  
**866009 (11301.01) Titanium**  
**Euro Tail Light Guard 76-06 CJ/Wrangler**

**Step 7:** Guide the tail light wiring through the new Euro Tail Light Guard.

**Step 8:** Re-connect the wiring connectors and guide the wiring back into the body.



**Step 9:** Reinstall the tail light assembly and Euro Tail Light Guard to the original mounting holes using the factory hardware previously removed.

**Step 10:** Carefully guide the taillight lens back on to the tail light housing.



**Step 11:** Reinstall the four screws removed in step 1.

**Caution:** Be careful not to over tighten these screws. Over tightening will crack the lens.

**Step 12:** Repeat steps 1-11 for the opposite side.

**Step 13:** Check tail light operation. Installation of your New Euro Tail Light Guards is now complete.

